



Wiring Diagram


SS-2I6A-A(C)

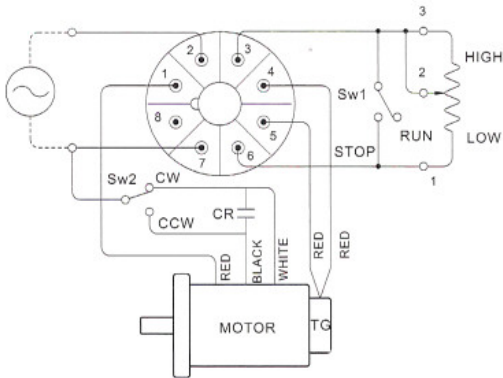


SS-2I6A-A(C)B

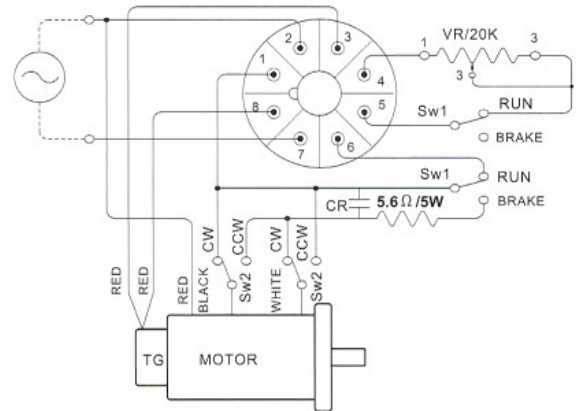

SD-2I6A-A(C)

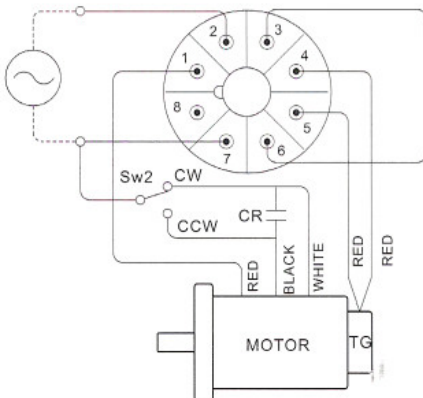


SD-2I6A-A(C)B

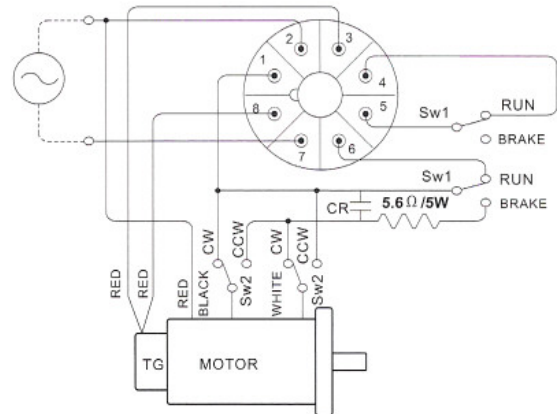

Storage

SB-2I6A-A(C)

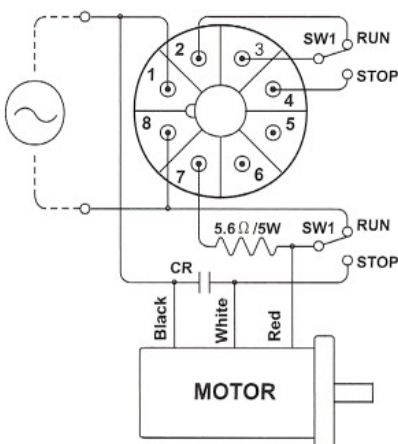

- (1) Check prior the capacity of motor & controller before connecting.
- (2) If use overheat protection switch for the motor , be sure the well connection between the protection switch and motor.
- (3) If use the cooling fan on variable speed motor , be sure to connect the power supply of cooling fan with power input of the controller.
- (4) If use the safe brake on variable speed motor , be sure to connect the power input of safe brake with motor starting power , to enable safe brake release while motor power on.
- (5) The variable speed motor with electric braking , while motor stop with electric braking for **0.5sec** , the controller will be not allowed for clockwise and counter clockwise operation.
- (6) The contact capacity of switch must be **AC 125V 5A above or AC 250V 5A above**.
- (7) The variable speed motor with electric braking , while used on running **0.5 sec** and stop **0.5 sec** , It will raise the motor temperature high. Please be sure that the motor have to be operation under temperature **90°C**.